"THE RODSMITH POWER WRAPPER XL - RW XL"

PROFESSIONAL 4 STATION ROD DRYING MACHINE

PACIFIC BAY INTERNATIONAL. INC.

FOR THE SERIOUS CUSTOM ROD BUILDER



- · Self-centering Deluxe Chuck includes 2 sets of jaw attachments
- · Holds from .175" to 1.50" dia. blanks & grips includes heavy duty chuck support
- · Variable speed Wrapping Motor (up to 4,000 RPM) 11 RPM Dry/Finish Motor
- · Double spool thread carrier with tensioner devices on easy glide rail
- · 3 adjustable locking supports insure rod stability during use at high speeds
- · Dual Foot & Dial controlled wrapping motor can also turn cork grips
- · 45° indications on metal flywheel for diamond wraps
- · Lightweight three section anodized aluminum track 8" total length
- · Compact tubular base sections disassemble for easy storage



1. CONTENTS

Please check contents of this package immediately after opening. It should contain the following parts and assemblies:

A. Headstock Assembly - Consists of wrapping/drying motor, 3-way switch, O-ring drive belt (including spare O-ring belt), foot control switch with power cord, deluxe lathe style chuck with jaw attachments (3 pcs.), aluminum chuck support.

- B. Aluminum tubes (6 pcs)
- C. Connecting bases (3 pcs).
- D. Thread carrier slide rails (3 pcs)
- E. Thread carrier slide rail connecting brackets (2 sets)
- F. Thread carrier rail spacers (2 pcs)
- G. Rod supports (3 pcs)
- H. Thread carriage with 2 ceramic guides and a magnet blade holder


2. RW-XL NON-INTERCHANGEABLE SPARE PARTS

RW-XL/AL-RAIL Thread Carriage Rail RW-XL/AL-TUBES Set of Aluminum tubes - 6 pieces RW-XL/BSE-PLTE Connecting Base Plate & Screw Set - (1 Set) RW-XL/EXTENSION Extension for the XL Power Wrapper RW-XL/RODSPRT Wrapping machine rod support with ball bearing rollers - (3 pcs) RW-XL/THRD-CRG Wrapping machine thread carrier & thread tensioner RW-XL/THRD-RAIL Wrapping machine thread carrier rail assembly

CAUTION:

- 1. Should not be operated by children.
- 2. Not to be used by the physically or mentally impaired unless supervised by a responsible party for their safety.
- 3. If the power cord is damaged do not attempt to repair by yourself. Please have repaired by a certified electrician.

042408

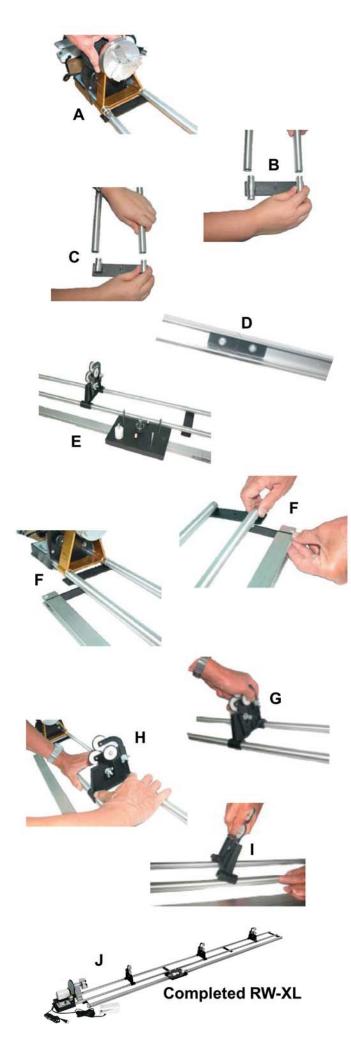

Pacific Bay International RODSMITH POWER WRAPPER XL

2. ASSEMBLY AND SETUP OF "THE RODSMITH XL ROD WRAPPER"

- Connect the Headstock Assembly to a pair of aluminum Tubes.
- Connect the aluminum Tubes to a Connecting Base and continue the process with the next set of Tubes and Connecting Base.
- C. Connect the ends of the 3rd set of Tubes to the terminating Connecting Base.
- D. Using the set screws, attach the two Brackets to the inside ends of the three Thread Carrier Slide Rails.
- E. Attach the Thread Carrier to the Slide Rails. Make certain the Rail edges are positioned in the wheel groves.
- Place the Thread Carrier Slide Rail Connecting Brackets at each end of the aluminum Tube frame. This will insure the proper distance between the Thread Carrier and the rod.
- G. Attach the Rod Supports to the aluminum tubes by pushing the Rod Supports down firmly directly onto the tube base.
- H. To move the Rod Support to the desired position, hold the aluminum base tubes firmly with your left hand and slide the Rod Support with your right hand.
- To remove the Rod Support from the aluminum Base tilt the Rod Support sideways.
- J. The assembled RW-XL can be mounted securely to a workbench or table by using wood screws through the holes in the Connecting Base plates. You may also use a heavy tape such as duct tape to fasten the Connecting Bases onto the workbench or table.

Additional Rod Building Products From Pacific Bay:



RodSmith QUAD Rod Dryer:

Cost Effective Solution for the Serious Rod Builder

Complete up to four rods at a time. Each of the four independent motors can hold up to a 1.5' diameter rod. Includes wall mount brackets to free up





RodSmith Rod Building Supplies:

Pacific Bay offers a complete line of rod building supplies including our advanced formula glue & finish and our high performance rod wrapping thread available in three varieties.

For free component catalog and rod building instructions, write to:



Pacific Bay International, Inc.

165 Business Park Loop, Sequim, WA 98382 Tel: 360-683-2080 Fax: 360-683-2234

Email: info@fishpacbay.com Web: www.fishpacbay.com